




HEAD PARAMETERS

Did you know this T8 function yet?

Did you know?

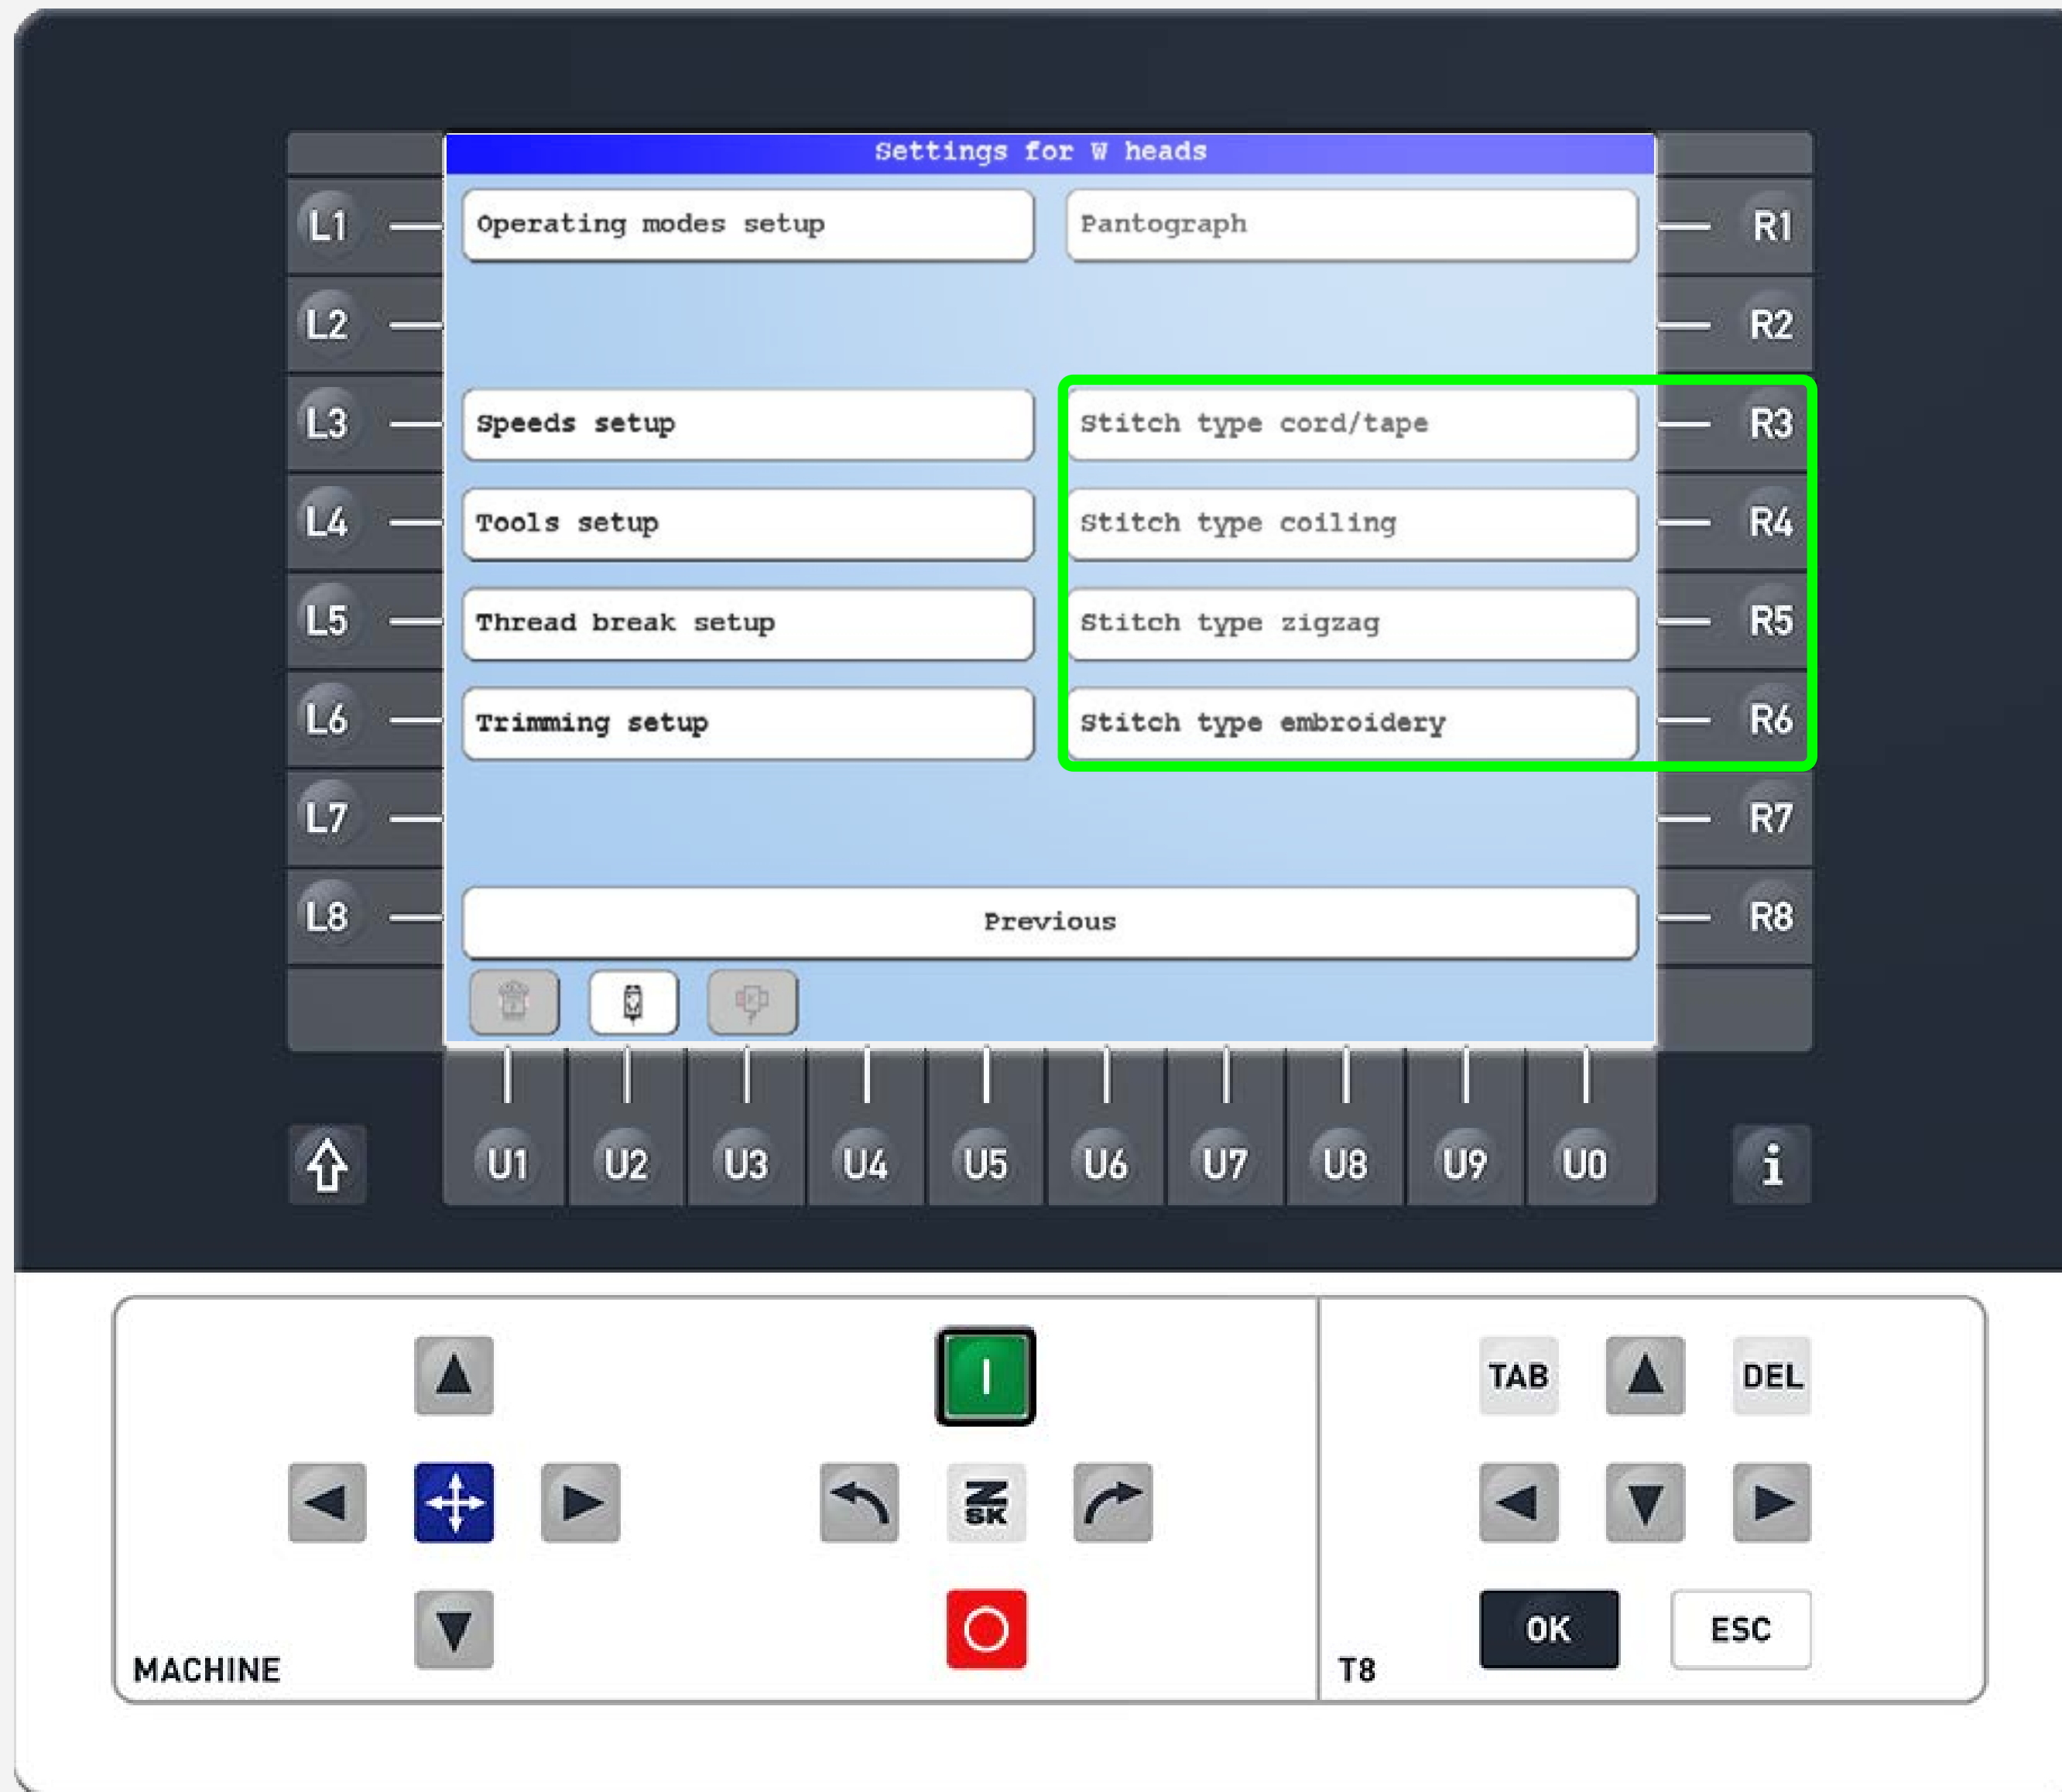

What?

The head parameters have a significant impact on the final design outcome. Especially when using the W- or K-head, it's crucial to set the correct parameters to achieve the desired results.

Why?

The head parameters can be set during the design creation process and saved within the design file. Alternatively, if you're not using the ZSK transport code, it can be adjusted directly on the machine.

How?

For setting the K-/W-Head parameters, press L2 on the start screen to enter the „Settings for K-/W heads“ tab.

Press the R3-R4 / R3-R6 function key to select the stitch type for which you want to adjust the settings. Change the parameters to your needs.

More on how parameters affect the design:



K-HEAD



W-HEAD



ZSK Stickmaschinen GmbH
Magdeburger Str. 38-40
47800 Krefeld, Germany

Fon: +49 (0) 2151 444 0
Fax: +49 (0) 2151 444 170
E-Mail: zsk@zsk.de